


Step 1: Determine Bracket Position

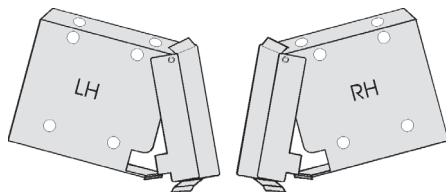

Unwrap the blind. Do not untie its cord. Hold the blind up to the window to determine the proper placement. It will fit either inside the window casing or outside the casing (either on the casing or on the wall).

Outside Mount

Hold the blind level and centre against the window casing. Mark the casing with a pencil just below the headrail on each end. Also mark the window casing 1/8" beyond the ends of the headrail. The right and left installation brackets will be placed on these marks.

Inside Mount

Make sure the headrail is level and clear of obstructions. Make pencil marks below the headrail on each end. The right hand and left hand installation brackets will be placed on these marks.

Ceiling or Overhead Mount

Hold the blind level and centre in front of the window. Make a pencil mark 1/8" beyond the ends of the headrail. The right and left installation brackets will be placed on these marks.

IMPORTANT: Keep the headrail level even if the window isn't!

Step 2: Mounting the Brackets

The brackets may be mounted using two screws in several different orientations depending on your needs.

Open the bracket's swivel cover with a screwdriver. Hold the bracket against the mounting surface and align it with the pencil marks. Using a pencil, mark the location of two diagonal holes for the mounting screws. You may drill holes for the screws using a 7/64" drill bit, or use a hammer and finishing nail or awl to make small holes to start the screws. Keep the screws a minimum of 1/4" from the edge of the wood to prevent it from splitting.


If the mounting surface is metal, you must pre-drill holes for the screws. Use a 1/8" steel drill bit.

If the surface is brick, tile, stone, or concrete, it will be necessary to use a carbide drill and suitable anchors, plugs or screws.

Plaster and wallboard need pre-drilled holes for special anchors or plugs.

Auxiliary Support Brackets


This bracket is only used on wider blinds to support the middle section of the blind. The support should be placed level with the installation brackets. Please make sure that it is positioned so that it will not interfere with the blind's cords and ladders or tapes.

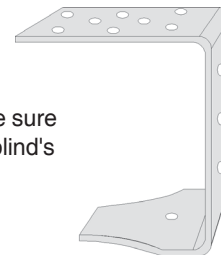

Step 3 Prepare the Valance

Before you secure the headrail into the brackets, snap the valance brackets onto the headrail 1" to the side of each of the ladders. Do not try to position them directly at the ladders as they may interfere with the operation of the blind.

For Wood Blinds, the headrail with valance clips can be installed. For Lakeside or Parkland blinds, it is easier to attach the clips to the valance, and then attach the entire valance assembly to the headrail. On inside mount blinds, this should occur before the headrail is installed into the brackets.

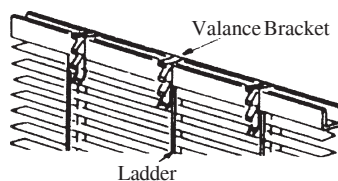

Wood
Valance Clip



Lakeside and
Parkland
Valance Clip


Attach the End Return

If an end return was ordered, the valance and end return sections will have mitered corners.

On Lakeside and Parkland blinds, the small metal corner piece is inserted into the back groove of both the end return and the main valance. This will ensure proper alignment for the corner.

Mounting the Valance

Please read carefully before proceeding as valance installation procedures are different for each type of blind, and may vary depending on type of installation.


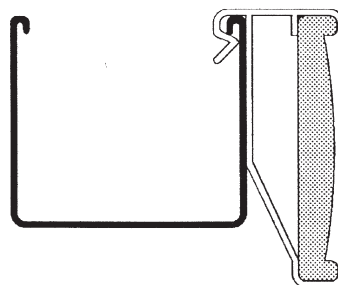


Wood Blinds

The valance clips fit neatly over the edges of the valance board. To do this, place the top edge of the valance into the space on the valance clip, and lightly push the bottom up and back until it snaps into place.

Lakeside and Parkland Blinds

This unique valance clip system allows the clip to "disappear" as it fits into a hidden back groove on the valance board. To do this, twist the clip into the groove on the back of the valance until it snaps into place. If you are doing an inside mount, snap the valance onto the headrail before you install the headrail into the mounting brackets. If you are doing an outside mount, you will find it easier to attach the valance after the headrail is installed.

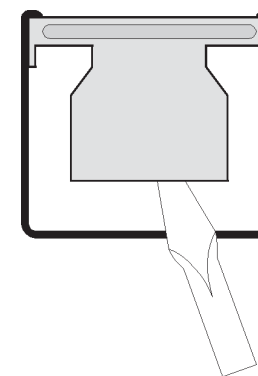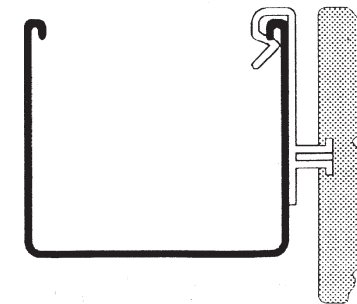

Step 4 Insert the Headrail


Gently push the headrail back into the brackets. If an auxiliary support bracket is used, be sure that it is properly engaged with the headrail.

Close the swivel covers to lock the headrail in place. If the blind does not fit snugly left to right; open the mounting brackets, remove the headrail, and pry out the tab at the ends of the headrail a bit with a flat head screwdriver. If the blind fits too tightly, press the tabs in with a pair of pliers. Reinstall the headrail and close the swivel covers.


Step 5 Attach the Wand

The tilter has a clear plastic shaft protector which slides up the tilter shaft. With this pushed up, place the clip on the end of the wand onto the hook on the tilter. After the wand is hooked in place, slide the clear protector down the tilter shaft to secure the wand in place.


Please note that not all blinds use tilt wands, so none will be provided if the cord tilter is specified.

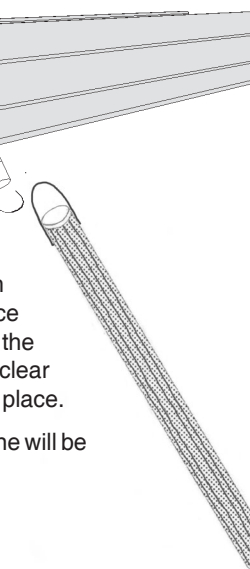

Step 6 Adjusting the Length

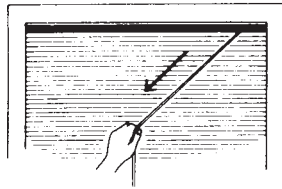

Raise & Lower

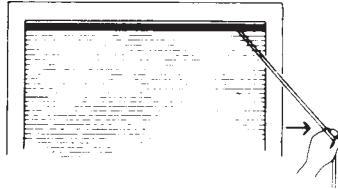

Lock in Place

Untie the cords. To raise or lower the blind, pull the cords downward and towards the centre of the blind. To lock the blind in place, pull the cords back past the end of the blind and release them.

Step 7 Tilting the slats

Rotate the wand to adjust the angle of the slats. Caution: Do Not continue to turn the wand after it starts to bind, as this may cause damage to the tilt mechanism. For Cord tilt blinds, pull alternate cords to tilt the slats.

Cleaning

Your blind is easily cleaned by extending it full length and closing the slats (not tightly). Wipe them with a soft brush or cloth, or clean them with your vacuum cleaner's brush attachment. A damp cloth or mild detergent can also be used. Do not leave moisture on wood slats. Please avoid scrubbing as the surface appearance may be affected. Tilt them in the other direction and wipe clean the other side as well.

11/06



WARNING MISE EN GARDE

1-866-662-0666

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.

--Always keep cords and bead chains out of children's reach.

--Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

--Do not tie cords together. Make sure cords do not twist together and create a loop.

Un jeune enfant peut s'ÉTRANGLER avec la boucle d'un cordon ou d'une chaînette. Il peut aussi enrouler le cordon autour de son cou et s'ÉTRANGLER.

--Gardez toujours les cordons et les chaînettes hors de portée des enfants.

--Éloignez les lits et parcs de bébé, ainsi que toute autre pièce de mobilier, des cordons et des chaînettes. Un enfant peut grimper sur un meuble pour atteindre les cordons.

--Ne nouez pas deux cordons. Faites en sorte que deux cordons ne puissent s'entremêler et former une boucle.

For more information on blind cord safety, contact Health Canada at 1-866-662-0666, or visit their website at:

www.healthcanada.gc.ca/blindcords

www.santecanada.gc.ca/cordons-stores



Wood & Faux Wood Installation Instructions

Congratulations on purchasing a Wood or Faux wood blind. Please take a few moments to read over the entire instructions prior to commencing. With careful installation and periodic cleaning, your blind will provide you with many years of trouble free service.

Your Package includes:

- 2 End brackets
- Mounting screws
- Wand (or optional cord tilter)
- Optional Valance & Brackets
- Auxiliary Support Brackets (blinds over 49" wide)

You may have:

- Optional Hold down brackets

You also need:

- Pencil
- Screwdriver (flat head) with medium size blade
- Robertson screw driver
- Drill
- 7/64" drill bit or hammer and finishing nail
- Level
- 1/16" drill bit

Warranty

The headrails of Jackson Parkland, Lakeside, and Enchanted Woods blinds are warranted to give satisfactory service under normal use for five (5) years from the date of purchase. During this time, Jackson will repair or replace without charge any part of the headrail which is defective in materials or workmanship.

The slats of Parkland and Lakeside blinds are warranted to give satisfactory service under normal use for five (5) years from the date of purchase. The slats of Enchanted woods blinds are warranted to give satisfactory service under normal use for three (3) years from the date of purchase. During this time, Jackson will repair or replace any parts which are defective in materials or workmanship.

This warranty does not cover soiling, scratching or fading from use. This warranty does not cover defects which result from misuse of the blind. This warranty does not cover claims for incidental or consequential damages. This warranty does not cover transportation nor installation charges.

We recommend that all Window Fashions be professionally installed.

