


End Brackets

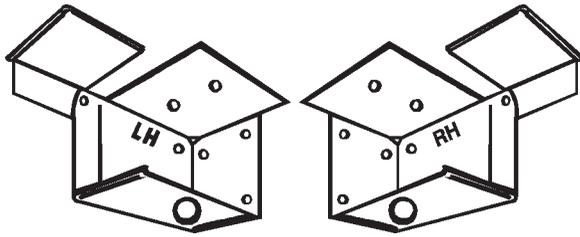

Unwrap the blind. Do not untie its cord. Hold the blind up to the window to determine the proper placement. It will fit either inside the window casing or outside the casing (either on the casing or on the wall).

Outside Mount

Hold the blind level and centre against the window casing. Mark the casing with a pencil just below the headrail on each end. Also mark the window casing 1/8" beyond the ends of the headrail. The right and left installation brackets will be placed on these marks.

Inside Mount

Make sure the headrail is level and clear of obstructions. Make pencil marks below the headrail on each end. The right hand and left hand installation brackets will be placed on these marks.

Ceiling or Overhead Mount



Hold the blind level and centre in front of the window. Make a pencil mark 1/8" beyond the ends of the headrail. The right and left installation brackets will be placed on these marks.

IMPORTANT: Keep the headrail level even if the window isn't!

Mounting the Brackets

The brackets may be mounted using two screws in several different orientations depending on your needs.

Open the bracket's swivel cover with a screwdriver. Hold the bracket against the mounting surface and align it with the pencil marks. Using a pencil, mark the location of two diagonal holes for the mounting screws. You may drill holes for the screws using a 7/64" drill bit, or use a hammer and finishing nail or awl to make small holes to start the screws. Keep the screws a minimum of 1/4" from the edge of the wood to prevent it from splitting

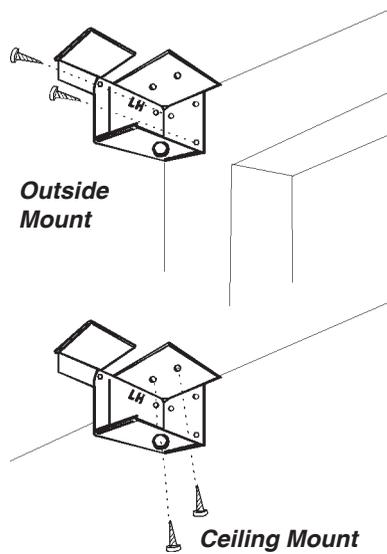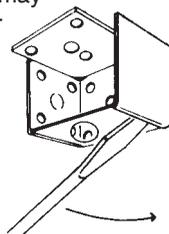

Inside Mount


If the mounting surface is metal, you must pre-drill holes for the screws. Use a 1/8" steel drill bit.

If the surface is brick, tile, stone, or concrete, it will be necessary to use a carbide drill and suitable anchors, plugs or screws.

Plaster and wallboard need pre-drilled holes for special anchors or plugs.



Auxiliary Support Brackets

The support should be placed level with the installation brackets. Please make sure that it is positioned so that it will not interfere with the blind's lifting and tilting mechanisms.

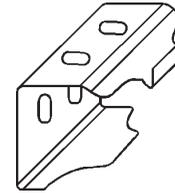

Valance Brackets


Before you secure the headrail into the brackets, snap the valance brackets onto the headrail 1" to the side of each of the ladders. Do not try to position them directly at the ladders as they may interfere with the operation of the blind.

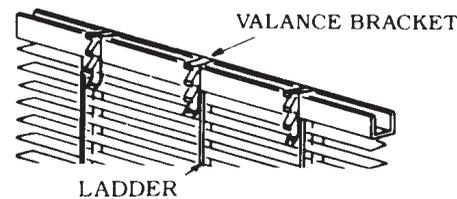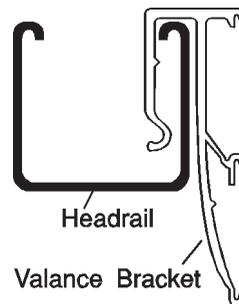

Insert the Headrail


Gently push the headrail back into the brackets. If an auxiliary support bracket is used, be sure that it is properly engaged with the headrail.

Close the swivel covers to lock the headrail in place. If the blind does not fit snugly left to right; open the mounting brackets, remove the headrail, and pry out the two tabs at the ends of the headrail a bit with a flat head screwdriver. If the blind fits too tightly, press the tabs in with a pair of pliers. Reinstall the headrail and close the swivel covers.

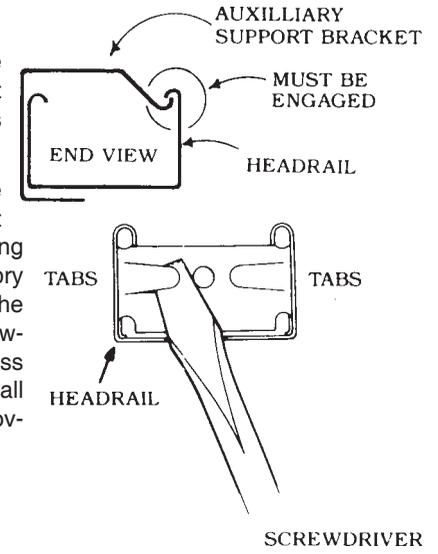

Cam Brackets

Unwrap the blind. Turn the pivot arm on the bracket to the full open position and rotate the bracket down into the headrail. Make sure that the cam brackets are located in positions where they will not interfere with the internal working components in the headrail.

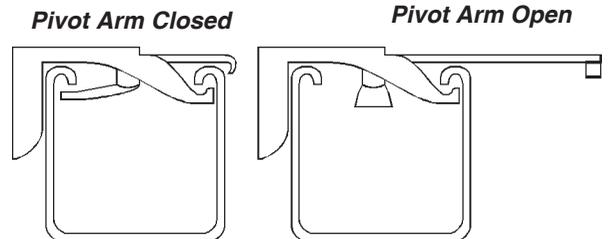

Put all the cam brackets on the rail and make sure that there is one in close proximity to the cord lock. Rotate the pivot arm closed. Hold the blind level and centre against the window. Mark the position of the brackets with a pencil.

Remove the brackets from the rail by fully opening the pivot arm, and rotating the brackets off of the headrail. Firmly screw the brackets into place using the same guidelines as for end brackets. Make sure all the cam brackets are level. Attach the valance brackets to the headrail 1" to the side of each ladder in the same manner as for End brackets.


Make sure that the pivot arms on all brackets are fully open. Hang the front lip of the headrail on the front support of the cam brackets. Rotate the headrail carefully into place and then close the pivot arm on the bracket.




Attach the Wand

Firmly grasp the star shaped wand in your fist, with the horseshoe clip standing up near your thumb. Use your thumb to snap the clip loose from the wand, and then slide it out of the wand completely. Feed the horseshoe clip into the hole at the bottom of the tilter.

Now reattach the bottom part of the horseshoe clip into the small side hole on the wand. Once again firmly grasp the wand in your fist, but this time use your thumb and forefinger to snap the horseshoe clip back into place.

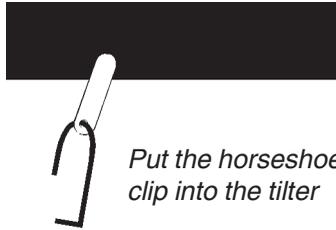

Put the horseshoe clip into the tilter

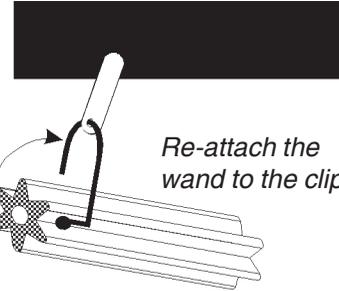


Re-attach the wand to the clip

Mounting the Valance

If the valance slats are not already installed in the valance channel, lay the channel flat and slide the slats in.

Take the channel with the slat in to the valance brackets which you previously attached to the headrail. Starting at one end, place the upper lip of the channel into the top groove on the valance bracket. Slowly snap the lower lip into the bottom groove of the valance bracket. Repeat this procedure at each of the valance brackets.

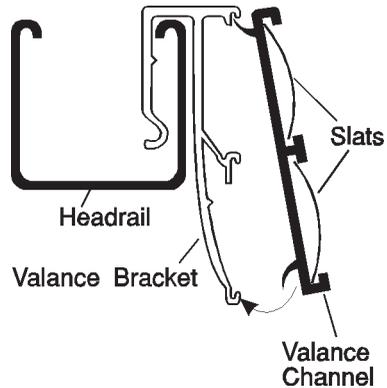


If end returns are required (outside mounts only), use the 4 small pieces of slat. Measure the size of the return from the wall to the valance, and bend the small slats at that point. Carefully slide the remaining section of the end return (small) slat into the valance channel behind the face slat. Repeat this procedure with all 4 pieces.


Cleaning

Your blind is easily cleaned by extending it full length and closing the slats (not tightly). Wipe them with a soft brush or cloth, or clean them with your vacuum cleaner's brush attachment. Tilt them in the other direction and wipe clean the other side as well. It is also possible to have them professionally cleaned. Consult your telephone directory for a cleaning service in your area.

Adjusting the Length

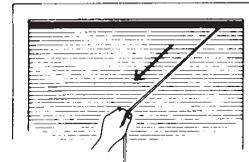

Raise & Lower

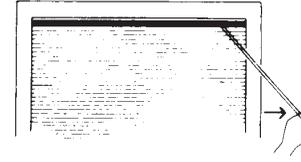

Lock in Place

Untie the cords. To raise or lower the blind, pull the cords downward and towards the centre of the blind. To lock the blind in place, pull the cords back past the end of the blind and release them.

Tilting the slats

Rotate the star shaped wand to adjust the angle of the slats. Caution: Do Not continue to turn the wand after it starts to bind, as this may cause damage to the tilt mechanism.

11/06

WARNING MISE EN GARDE
1-866-662-0666

<p>Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.</p> <p>-- Always keep cords and bead chains out of children's reach.</p> <p>-- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.</p> <p>-- Do not tie cords together. Make sure cords do not twist together and create a loop.</p>	<p>Un jeune enfant peut s'ÉTRANGLER avec la boucle d'un cordon ou d'une chaînette. Il peut aussi enrouler le cordon autour de son cou et s'ÉTRANGLER.</p> <p>-- Gardez toujours les cordons et les chaînettes hors de portée des enfants.</p> <p>-- Éloignez les lits et parcs de bébé, ainsi que toute autre pièce de mobilier, des cordons et des chaînettes. Un enfant peut grimper sur un meuble pour atteindre les cordons.</p> <p>-- Ne nouez pas deux cordons. Faites en sorte que deux cordons ne puissent s'entremêler et former une boucle.</p>
--	---

For more information on blind cord safety, contact Health Canada at 1-866-662-0666, or visit their website at:

www.healthcanada.gc.ca/blindcords

www.santecanada.gc.ca/cordons-stores



Horizontal Blinds Installation Instructions

Congratulations on purchasing a Jackson Horizontal Blind. Please take a few moments to read over the entire instructions prior to commencing. With careful installation and periodic cleaning, your blind will provide you with many years of trouble free service.

Your Package includes:

- 2 End brackets (or optional cam brackets)
- Mounting screws
- Wand
- Channel valance (not included on commercial installation "Econo-blinds")
- Auxiliary Support Brackets (blinds over 49" wide)
- medium size blade
- Robertson screw driver
- Drill
- 7/64" drill bit or hammer and finishing nail
- Level
- 1/16" drill bit

You may have:

- Optional hold down brackets
- Optional Cam Brackets

You also need:

- Pencil
- Screwdriver (flat head) with

WARRANTY

Jackson horizontal blinds are warranted to give satisfactory service under normal use for five (5) years from the date of purchase. During this time, Jackson will repair or replace without charge any part of the horizontal blind which is defective in materials or workmanship. This warranty does not cover defects which result from misuse of the horizontal. This warranty does not cover claims for incidental or consequential damages. This warranty does not cover transportation nor installation charges.

We recommend that all Window Fashions be professionally installed.